



**BURG  
WÄCHTER**

PointSafe

**pointsafe**

★ **NEW** ★

Raised protection against  
breakup and drilling!



**en** User Manual

**BURG-WÄCHTER KG**  
Altenhofer Weg 15  
58300 Wetter  
Germany

BA PointSafe dp 11/2012

[www.burg.biz](http://www.burg.biz)

## Structure



## Illustrations

- A Enter
- B Close / Clear
- C Set
- D Time
- E H/M

Dear customer,

Thank you for buying a safe belonging to the Point Safe family. This safe was developed and manufactured by Burg-Wächter using the latest technical features. This Point Safe has been designed to be used in both standard and hotel modes. In addition to the keypad this safe comes with mechanical emergency override key.

We hope you enjoy your new BURG-WÄCHTER safe.

**Important: Please read the entire User Manual before you start programming.**

### Important Notes

- Store your codes and emergency Override key at a secure location **and Not inside the safe (the emergency lock is located under the 4 batteries).**
- For security reasons we recommend you do **Not** use personal numbers for example D.O.B and Telephone numbers as your User or Master code.
- If the safe is not going to be used for a prolonged period of time, please remove the batteries.
- For hotel mode: See **"Point Safe in hotel mode"** and the attached guest code instructions.
- For security reasons, Both the user and administrator codes should be changed from there factory settings.
- This Point safe will only reach its required security level if correctly bolt fixed to a secure wall or floor.  
*(Please use the provided anchoring bolts)*
- For security reasons, the user code should be different from the Master code.
- Please contact your vendor if you have any questions or problems regarding your Burg Wachter Point Safe.

### General

The Point series safes can be operated both standard mode and a hotel mode. In both of these modes, a Master code and a User code are available to operate the safe.

The Master code must have 8 digits.  
The User code can have between 3 and 6 digits.

**Master Code:** 12345678 (factory set)  
**User Code:** 168 (factory set)

## Technical data

<b>Blocking times</b>	After 3 wrong code entries for 5 minutes
<b>Power supply</b>	4 x MIGNON LR6/AA/ALKALINE
<b>Working temperature conditions</b>	-15 °C to +50 °C up to 95 % rel. air humidity (noncondensing)

## Setting up PointSafe

- Remove the screw from the battery compartment side.
- Move the front cover cap with the PointSafe logo to the right.
- Insert the batteries (4 pieces, LR6/AA/1.5V/Alkaline).
- The electronics will need approx. 30 sec. to load the program. Then press the "Enter" button.
- Enter the user code (168).
- Press the "Enter" button again.  
Now the safe can be opened and individually programmed.

**Attention:** If the batteries are too low, "Lo Batt" appears on the display. **All 4** batteries need to be replaced in such case (LR6/AA/1.5V/Alkaline).

## Opening Safe with User Code

- Press the “Enter” button.
  - Enter the user code.
  - Press “Enter” again.
- The door automatically opens.

## Locking the Safe

The door locks automatically when you close the safe door and press the “Close” button.

**Attention:** In case the door is blocked by an obstacle, the display shows “BLOCK”. The safe cannot be closed. Remove the obstacle and repeat your action.

## Changing the User Code

Enter the existing User Code, The door will open and the bolts will be **retracted**.

- Press the “enter” button and “Code” will appear on the display.
- Enter the new **User code** (3 to 6 digits).
- Press “Enter” again and then the “Close” button.

The door will lock automatically and User Code will be changed.

## Incorrect Entries

After 3 incorrect attempts the safe electronics will block the safe for 5 minutes. After this period, the safe can be opened using the correct User Code or Master Code. If you type a wrong digit, you can delete your entry using the “Close” button.

## Setting the Time

The safe door must be open and the bolts **extended**.

- Press the “SET” button, the hour indicator is flashing.
- Press the “H/M” button till the required hour is indicated (hour indication: A 1 – 12 = 1 – 12 am, P 1 – 12 = 13 – 24 pm).
- Press the “SET” button – the minute indicator is flashing.
- Press the “H/M” button again till the required minute is indicated.
- Finally, press the “SET” button again.

## Opening with the Master Code

- Press the “Enter” button.
- Enter the Master Code (**factory set to 12345678**).
- Press the “Enter” button again.

The display shows “PASS 1” and a 10 second countdown is running. After this time the user code is displayed briefly and the door automatically opens.

**Attention:** In order to close the safe, the user code must be newly programmed (see “Programming of user code”).

## Changing the Master Code

The safe door must be open and the bolts **extended**.

- Press the “Enter” button.
- Enter the Master Code (factory set to 12345678).
- Press the “Enter” button.
- The display will show “PASS 1” and a 10 second countdown is running. Press the “Enter” button again **during this time**.
- Now enter your new Master Code (8 digits).
- Press the “Enter” button.
- Now enter your new Master Code for a second time.
- Finally press the “Enter” button.

The display will show “Good” and the Master Code will be changed.

## Point Safe in Hotel Mode

To change Point Safe from Standard Mode to Hotel Mode. The door must be **open** and the bolts **extended**.

- Press the “Enter” button.
- Enter your 8 digit Master Code.
- Press “Enter” again.
- The display shows “PASS 1” and a 10 second countdown is running. Press “Enter” **during this time**.
- Enter the code “16805”.
- Confirm the change with “Enter” (the display shows “SET-05”) Point Safe will now be in Hotel Mode.

When the door remains open for over 5 minutes, the user code will now need to be re-entered. If you want to switch back to the Standard mode, proceed as described above and use the code “16800” at the corresponding point. The display will show “SET-00” and you will now be in Standard Mode.

## Disposal of batteries

**Dear customer,**

please help us to reduce waste. Should you ever intend to dispose of this device, please bear in mind that many components of the device contain precious materials, which can be recycled. Please do not dispose of this device as common waste, but rather request information from the responsible local authority on the collecting points for electric waste.



**The dustbin symbol indicates:**

*Discharged batteries must not be disposed as common waste. Please return the batteries to their vendor or the local recycling yard. Their return is free of charge and it is legally required.*

Errors and changes reserved.