



## USER INSTRUCTIONS

# KEY LOCKING



### ABOUT THE KEY LOCK

The safes are supplied with 2 keys. Keep the keys in a secure place - but not in the safe!  
If both keys are lost, the safe will have to be forced open.  
Please note that the key will only fit inside the lock in one position.  
Do not force the key into the lock.

### How to open the safe

- Insert the key into the key hole
- Turn the key clockwise until it stops
- Rotate the handle until the bolts are fully retracted
- Open the door

NOTE: If your safe has dual key locking you must unlock the top lock first.

### How to close the safe

- Ensure that the bolts are fully retracted (if necessary rotate the handle)
- Gently push the door shut. Always ensure that there are no objects or people in the way of the closing door
- Turn the handle until the bolts are fully engaged
- Turn the key anti-clockwise until it stops
- Remove the key from the lock



THE SURE DEFENCE

# USER INSTRUCTIONS - PS3 I/O LOCK



## ABOUT THE LOCK

This lock requires a 6-digit code to open the lock. You can have a master code and up to 9 user codes. In order to activate the user codes, you will need the master code. The master code can't be deleted but you can remove user codes. The lock also features dual code opening and time delay opening.



### How to open the safe

- Press the [ON] key
- Enter a valid 6-digit code (the factory default is '123456')
- Press the [ENTER] key
- Within 4 seconds, turn the handle clockwise until the stop position is reached
- Open the safe door

### Incorrect Entry

- If an incorrect code has been entered, the red LED will flash
- After 3 incorrect entries, a penalty time of 1 minute will begin. During this time no other code entries can be made
- When the penalty time is over press the [ON] key
- Enter a valid 6-digit code

NOTE: Everytime an incorrect entry code is entered continuously the penalty time is extended for 2, 4, 8, up to the maximum of 16 minutes

### How to close the safe

- Ensure that the bolts are fully retracted (if necessary rotate the handle clockwise to retract the bolts)
- Gently push the door shut. Always ensure that there are no objects or people in the way of the closing door
- Turn the handle anti-clockwise until the stop position is reached

## Changing the master code

- Open the lock using a valid 6-digit master code
- Open the safe door
- Press the [ON] key
- Press the [ENTER] key
- Press key [1] followed by the [ENTER] key
- Enter the existing 6-digit master code (the factory default is '123456')
- Press the [ENTER] key
- Enter a new 6-digit code followed by the [ENTER] key
- Re-enter the new 6-digit code, then press the [ENTER] key to confirm

## Activating a user code

(using the master code)

There are 9 user codes under the user numbers 1-9. To set up a user code, you need to input the user number first.

- Press the [ON] key
- Press the [ENTER] key
- Press key [2] followed by the [ENTER] key
- Enter the user number you want to set up, i.e. enter key [1] for user number 1 or key [2] for user number 2 and so on
- Press the [ENTER] key
- Enter the 6-digit MASTER code followed by the [ENTER] key
- Enter a new 6-digit code for your chosen user code
- Press the [ENTER] key
- Re-enter the new 6-digit user code, then press the [ENTER] key to confirm

## Deleting a user code

(using the master code)

- Press the [ON] key
- Press the [ENTER] key
- Press key [0] followed by the [ENTER] key
- Enter the user number for the code you wish to delete, i.e. key [2]
- Press the [ENTER] key
- Enter the existing 6-digit MASTER code followed by the [ENTER] key

## Changing a user code

(using a user code)

- Press the [ON] key
- Press the [ENTER] key
- Press key [3] followed by the [ENTER] key
- Enter the user number for the code you wish to change, i.e. key [2]
- Enter the existing 6-digit user code
- Press the [ENTER] key
- Enter a new 6-digit code followed by the [ENTER] key
- Re-enter the new 6-digit code, then press the [ENTER] key to confirm

## Turning on the Dual Code function

The Dual Code function means that you will require 2 different codes to open the safe, the master code and any other user code. Ensure that you have at least one user code programmed in the lock as well as the master code before you turn on this function.

- Press the [ON] key
- Press the [ENTER] key
- Press key [7] followed by the [ENTER] key
- Enter the 6-digit master code followed by the [ENTER] key

## Turning off the Dual Code function

- Press the [ON] key
- Press the [ENTER] key
- Press key [8] followed by the [ENTER] key
- Enter the 6-digit master code followed by the [ENTER] key

## Opening the safe with the Dual Code function

- Press the [ON] key
- Press key [0] followed by the [ENTER] key
- Enter the 6-digit master code followed by the [ENTER] key
- Within 1 minute enter a user number i.e. press key [2], followed by the [ENTER] key
- Enter the 6-digit user code for that user followed by the [ENTER] key

- Within 4 seconds, turn the handle clockwise until the stop position is reached
- Open the safe door

## Programming the Time Delay

A Time Delay is the time you have to wait in between the entry of your code and the opening of your safe. An Open Window is the amount of time you have to open your safe after the time delay. For example, if you wanted a 30 minute Time Delay and a 9 minute Open Window, this would mean that once you have entered a valid 6-digit code, you have to wait 30 minutes before you can open the safe door. After 30 minutes you will have 9 minutes to open the safe door. If you wait longer than 9 minutes, you have to start the process again. In this lock you can program a Time Delay from 1 - 99 minutes and an Open Window of 1 - 9 minutes.

- Press the [ON] key
- Press the [ENTER] key
- Press key [6] followed by the [ENTER] key
- Enter the 6-digit master code followed by the [ENTER] key
- Enter the 3 digits for your Time Delay and Open Window, i.e. [3][0][9] (this would be for a 30 minute Time Delay and a 9 minute Open Window)
- Press the [ENTER] key

## How to remove the Time Delay

- Press the [ON] key
- Press the [ENTER] key
- Press key [6] followed by the [ENTER] key
- Enter the 6-digit master code followed by the [ENTER] key
- Enter [0][0][0]
- Press the [ENTER] key

## Opening the safe with the Time Delay

- Press the [ON] key
- Enter a valid 6-digit code
- Press the [ENTER] key
- Wait for the Time Delay to finish. An acoustic signal will sound when the Time Delay is over, i.e. 30 minutes
- Re-enter the same 6-digit code during the Open Window
- Press the [ENTER] key

## Power supply / Battery change


A series of beeps indicates that the battery is weak and must be replaced.

- Only use 9V ALKALINE batteries with this lock
- Burton Safes recommend the Duracell brand

To change the battery, you will need to open the safe and remove the plate on the back of the door with a small screwdriver.

Press the catch on the top edge of the battery cover with a screwdriver and lever off the battery lid. Pull the battery out carefully until the battery clip is visible. Release the battery from the clip and replace. When the new battery is in place, re-engage the lid.

Please ensure that the cable is not damaged.

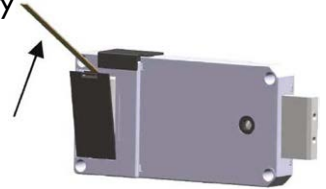

## Emergency power supply

- If the safe has run out of power hold a 9V Duracell battery to the front of the lock against the + and - connectors
- While keeping contact at all times with the battery, press the [ON] key
- Enter a valid 6-digit code followed by the [ENTER] key
- Within 4 seconds, turn the handle clockwise until the stop position is reached
- Once inside the safe, follow the above instructions to change the battery



# CERTIFICATE



The **European Certification Body GmbH** accredited  
according to ISO/IEC 17065 awards to

## **Burton Safes Limited**

**Brockholes Business Park, Rock Mill Road, Brockholes, Holmfirth / GB**

**the right to carry the ECB•S certification mark for**

Secure safe cabinets of security level S2 according to EN 14450:2005 and  
and ECB•S C10 (clause 3.1.11)

(Series Eurovault Aver Grade S2 – Types 1, 2, 3, 4 ,5, 6 and Aver S2 Till Safe)  
(see Annex)

### **Certificate Number**

**1104/SSC14-01B**

6 February 2019

valid from

6 February 2019

Frankfurt am Main

31 October 2021

valid until

  
Dr. Markus Heering

Certification Body



# ECB•S

European Certification Body GmbH  
Lyoner Straße 18 • 60528 Frankfurt am Main • Germany  
[www.ecb-s.com](http://www.ecb-s.com)