

USER INSTRUCTIONS - BURTON DUO LOCK (SWING BOLT)

ABOUT THE LOCK

This lock requires a 6-digit code to open the lock. You can have 2 different codes on this lock, the master code and the secondary code. This lock can also have a time delay activated of 1-99 minutes and an open period of 1-19 minutes.



How to open the safe

- Enter a valid 6-digit code (the factory default is '123456')
- If the code has been entered correct the lock will beep twice
- Within 3 seconds turn the handle to the open position
- Open the safe door

Incorrect Entry

- If an incorrect code has been entered, it will be followed by a long beep
- After 4 incorrect entries, a penalty time of 5 minutes will begin. During this time, no other code entries can be made
- When the penalty time is over enter a valid 6 digit code

NOTE: 2 more consecutive invalid codes will restart an additional 5 minutes penalty time

How to close the safe

- Ensure that the bolts are fully retracted (if necessary rotate the handle clockwise to retract the bolts)
- Gently push the door shut. Always ensure that there are no objects or people in the way of the closing door
- Turn the handle bar anti-clockwise until the stop position is reached

Activating the secondary code

(using the master code)

- Press and hold key [1] until the lock beeps twice
- Enter the 6-digit MASTER code
- Now enter a 6-digit code for the SECONDARY code; the lock will beep twice
- Enter the 6-digit code for the secondary code again to confirm. The lock will beep twice and the code is set

Deleting the secondary code

(using the master code)

- Press and hold key [3] until the lock beeps twice
- Enter the 6-digit master code
- The secondary code is now deleted

Changing your code

- Unlock and open the safe door
- Press and hold key [0] until the lock beeps twice
- Enter the current 6-digit code of the user you wish to change (master or secondary) the lock will beep twice
- Now enter the new 6-digit code, the lock will beep twice
- Enter the new 6-digit code again to confirm; the lock will beep twice. The code has now been changed for that user

NOTE: if there are any code entry errors, they will be followed by a long beep. The old code will remain valid and you can repeat the steps.

Programming the time delay and open window

A time delay is the time you have to wait in between the entry of your code and the opening of your safe. An open window is the amount of time you have to open your safe. For example, if you wanted a 30 minute time delay and a 10 minute open window, this would mean that once you have entered a valid 6-digit code, you have to wait 30 minutes before you can open the safe door. After 30 minutes you will have 10 minutes to open the safe door. If you wait longer than 10 minutes, you have to start the process again.

- Press and hold key [9] until the lock beeps twice
- Enter the 6-digit master code
- Now enter the desired time delay and open window length, i.e. for a 30 minute time delay and 10 minute open window, enter: 3010
- The lock will beep twice
- Enter the time delay and open window again to confirm. The lock will beep twice. The time delay and open window are now set

How to open the safe with the time delay active

- Enter a valid 6-digit code. If the code is entered correctly, the lock will beep twice
- When the time delay begins, the LED will flash every 2 seconds
- Once the time delay ends the open window will begin. During the open window, the lock will beep once every 2 seconds
- During this time, turn the handle to the open position and open the safe door

How to change / remove the time delay active

- Enter a valid 6-digit code, if the code is entered correctly the lock will beep twice
- When the time delay begins the LED will flash every 2 seconds
- Once the time delay ends the open window will begin
- During the open window, follow the steps of programming the time delay to change time length
- To remove the time delay, you need to enter 0001 as the time delay and open window length

Current supply / battery change

A series of beeps indicates that the battery is weak and must be replaced. Only use a 9V ALKALINE battery. (Burton Safes recommend the Duracell brand).

Take care when changing batteries to ensure that no cables are damaged.



USER INSTRUCTIONS

KEY LOCKING



ABOUT THE KEY LOCK

The safes are supplied with 2 keys. Keep the keys in a secure place - but not in the safe!
If both keys are lost, the safe will have to be forced open.
Please note that the key will only fit inside the lock in one position.
Do not force the key into the lock.

How to open the safe

- Insert the key into the key hole
- Turn the key clockwise until it stops
- Rotate the handle until the bolts are fully retracted
- Open the door

NOTE: If your safe has dual key locking you must unlock the top lock first.

How to close the safe

- Ensure that the bolts are fully retracted (if necessary rotate the handle)
- Gently push the door shut. Always ensure that there are no objects or people in the way of the closing door
- Turn the handle until the bolts are fully engaged
- Turn the key anti-clockwise until it stops
- Remove the key from the lock



THE SURE DEFENCE

CERTIFICATE



The **European Certification Body GmbH** accredited
according to ISO/IEC 17065 awards to

Burton Safes Limited

Brockholes Business Park, Rock Mill Road, Brockholes, Holmfirth / GB

the right to carry the ECB•S certification mark for

Deposit systems of resistance grade D-I according to EN 1143-2:2014
and ECB•S C10 (clause 3.1.11)
(Series Eurovault Aver Deposit 1 – Types 1 and 2)
(see Annex)

Certificate Number

1104/DS15-01A

7 November 2018

valid from

5 November 2018

Frankfurt am Main

6 November 2022

valid until


Dr. Markus Heering

Certification Body



European Certification Body GmbH
Lyoner Straße 18 • 60528 Frankfurt am Main • Germany
www.ecb-s.com

ECB•S